


Please follow instructions for GBD9010X rotors


The kit will include five (5) buttons or Roller Pins, five (5) Wave Washers, five (5) Std Flat washers, five (5) Large Beveled Washers

Please follow instructions correctly. If you have any questions, call (805) 988—2900 to talk to a tech

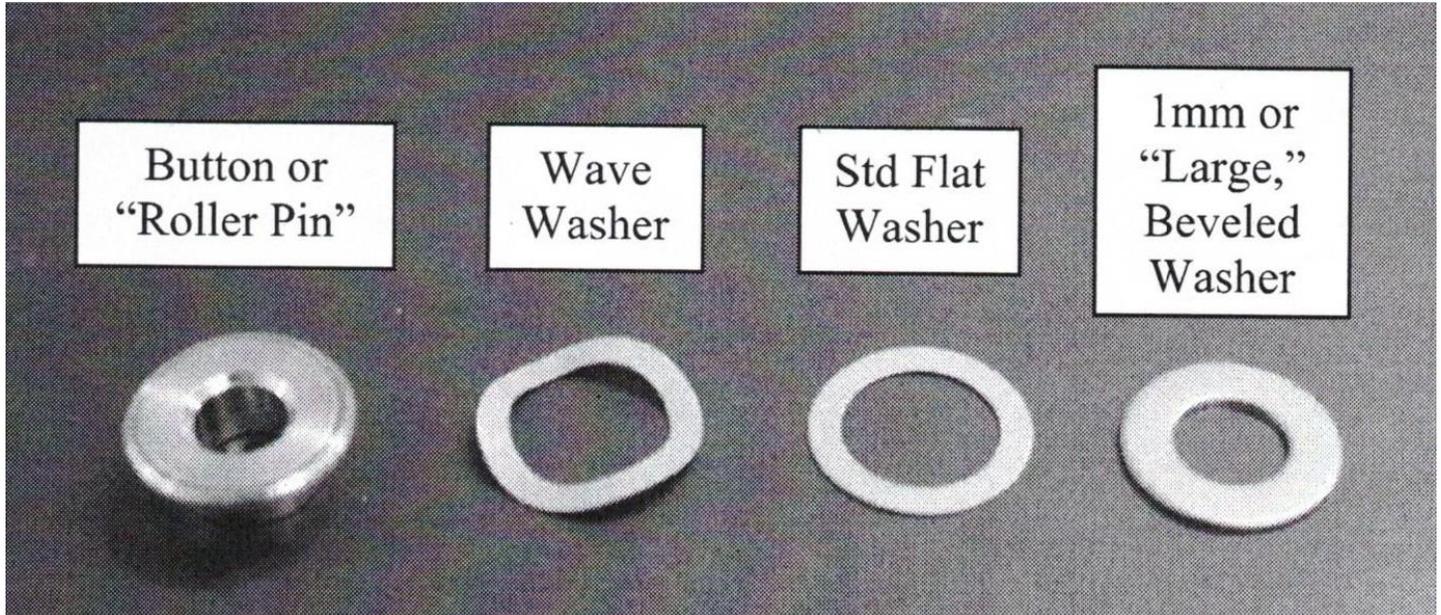


Step 1. You will need to take the wheel off the bike and remove the stock rotors

Step 2. Lay the wheel down. Place the Large Beveled Washers on the hub or ABS ring lined up with the bolt holes. Be Shur to place the flat side down. see picture below.

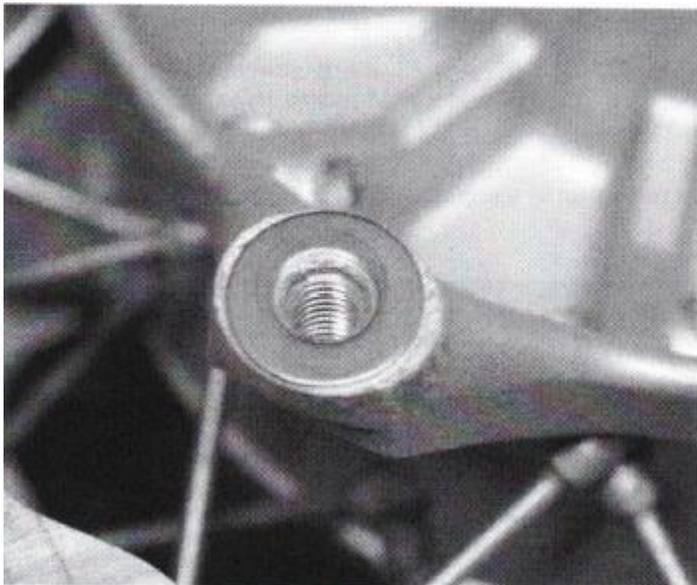

Large Beveled Washers with Beveled side up


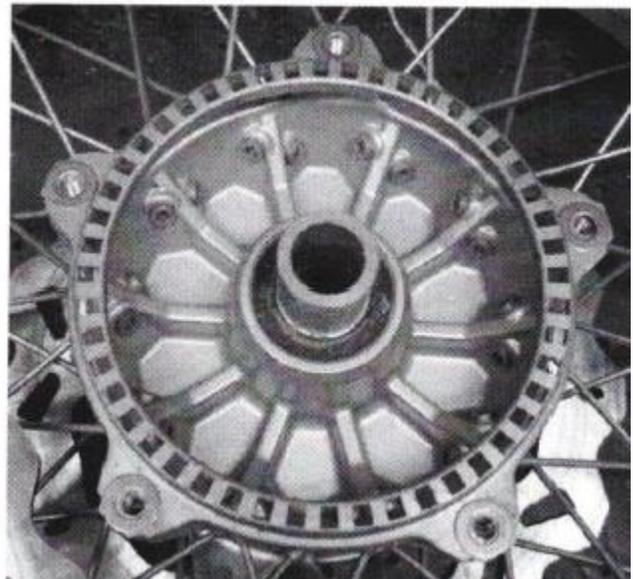


Large Beveled Washers with abs ring



Step 3. Gently lay the rotor making sure the GBrakes part # is facing up

Step 4. Install the hardware in the order Rotor, Std Flat washer, Wave Washer, Buttons or Roller Pins, OEM bolt using Loctite torque to factory specs using star pattern

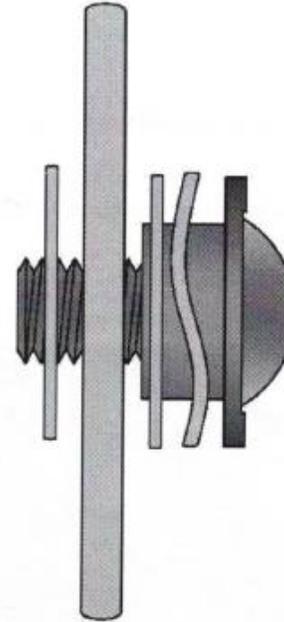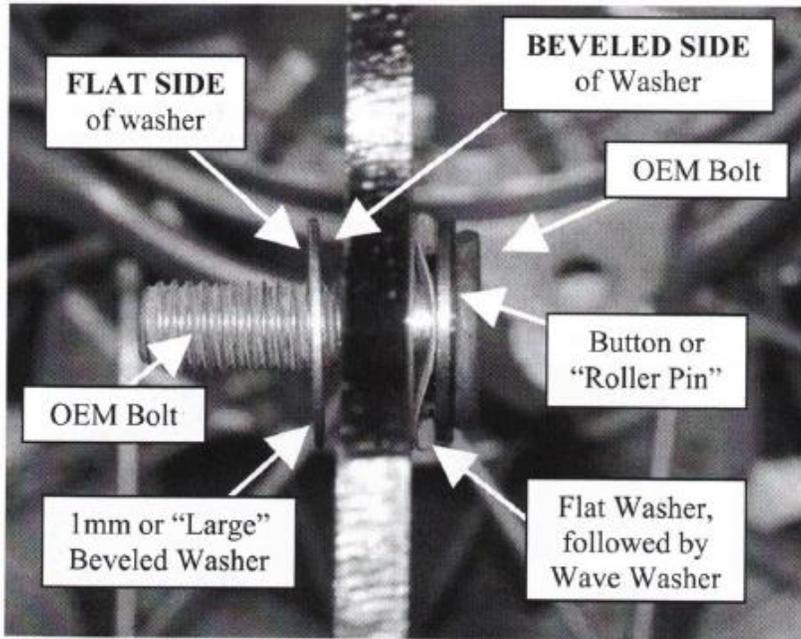

Step 5. Repeat these steps to the other side of the wheel. You may want to lay the wheel or hub down on something soft to prevent damage to your new rotors.

Step 6. For optimum performance we recommend replacing your pads at this time to round out your performance gain. Used pads will not conform to new flat rotors and will hinder performance.

Step 7. Pump your brake lever a few times to make sure your system is working properly. Beware the overall feel has changed dramatically. Your brakes pads will need to be bedded in. Please take it easy while you get used to the new brakes. Don't hesitate if you have any questions. Call us at (805) 988—2900 to talk to a tech